



How to install external library in THONNY


1) Click Tools and Manage packages...

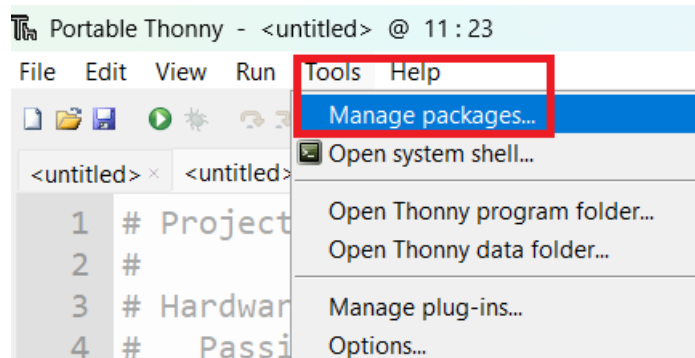


2) Type the library name and click search.

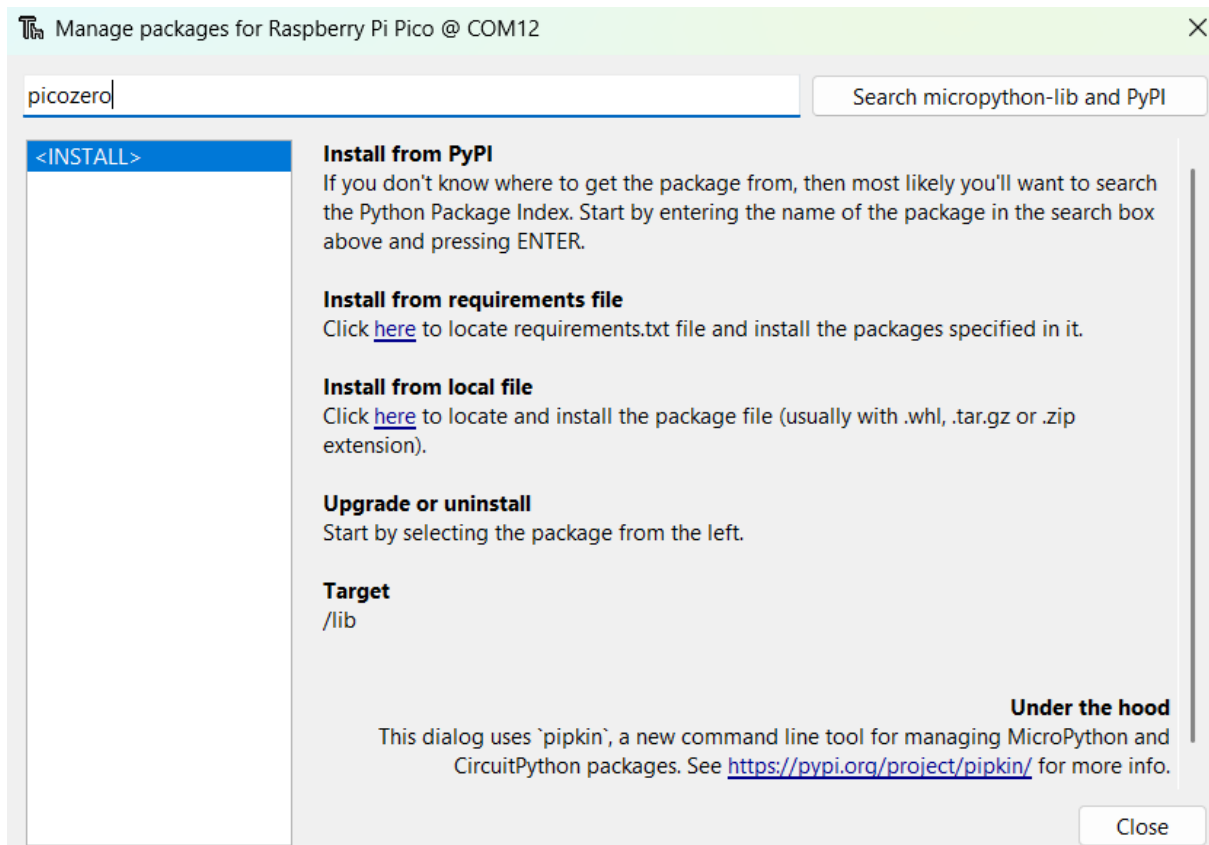

3) Click the correct library.

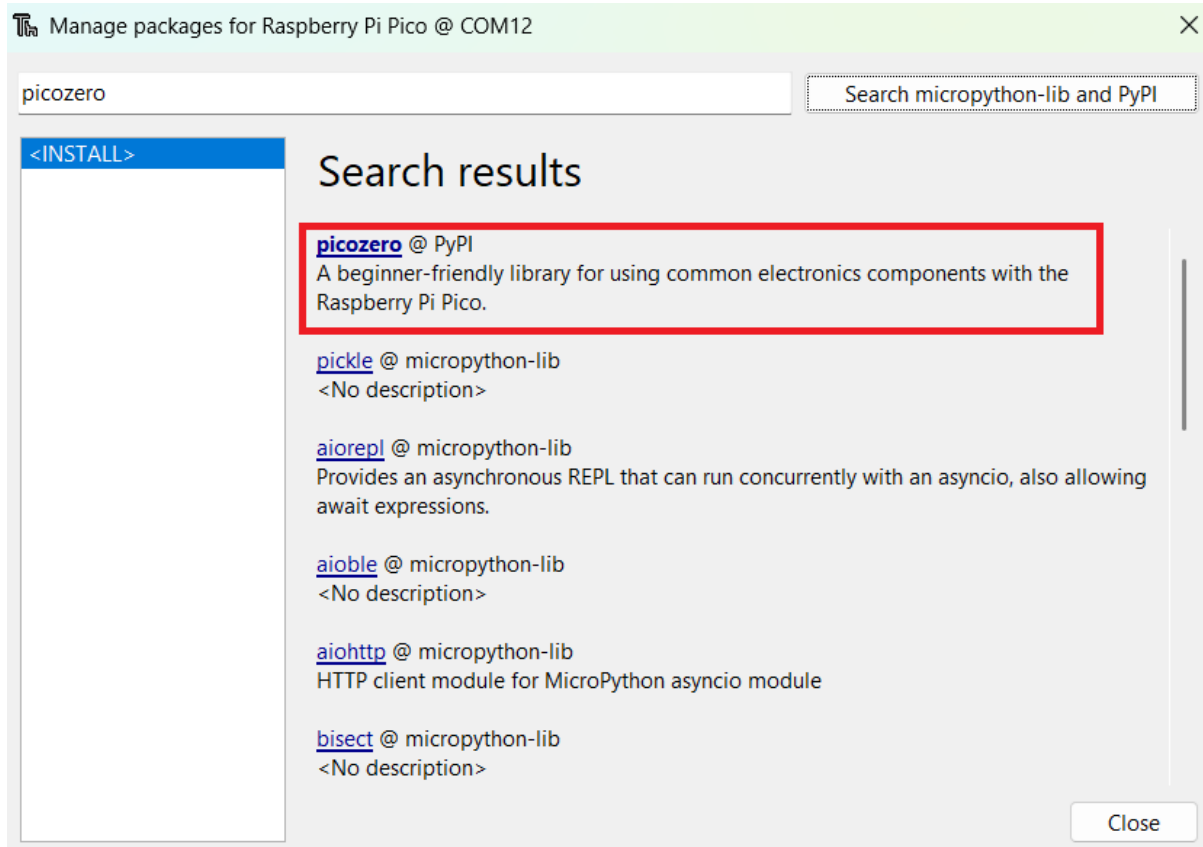

4) Click install

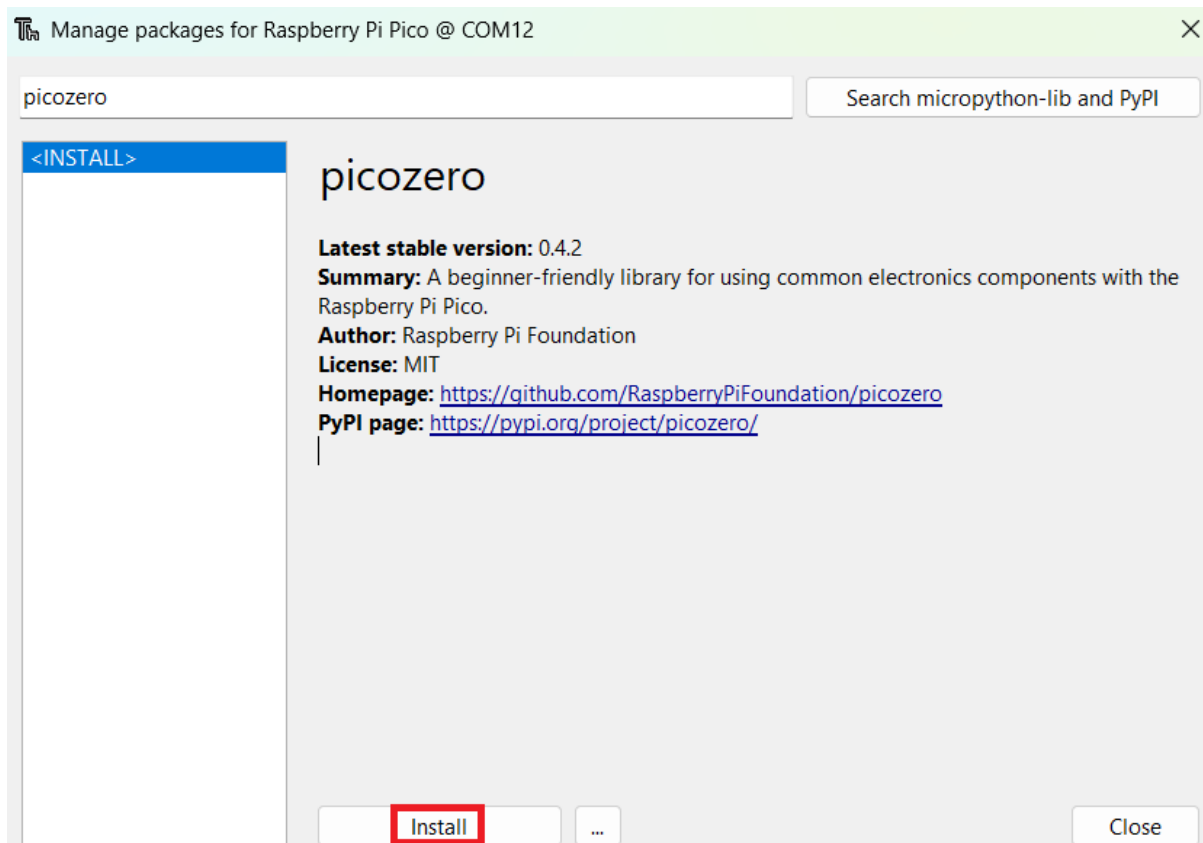

picozero

Search micropython-lib and PyPI

<INSTALL>

picozero

picozero

Installed version: 0.4.2**Installed to:** /lib**Latest stable version:** 0.4.2**Summary:** A beginner-friendly library for using common electronics components with the Raspberry Pi Pico.**Author:** Raspberry Pi Foundation**License:** MIT**Homepage:** <https://github.com/RaspberryPiFoundation/picozero>**PyPI page:** <https://pypi.org/project/picozero/>

Upgrade

Uninstall

...

Close